



# BDC RIP Installation Diagram

## Electrical

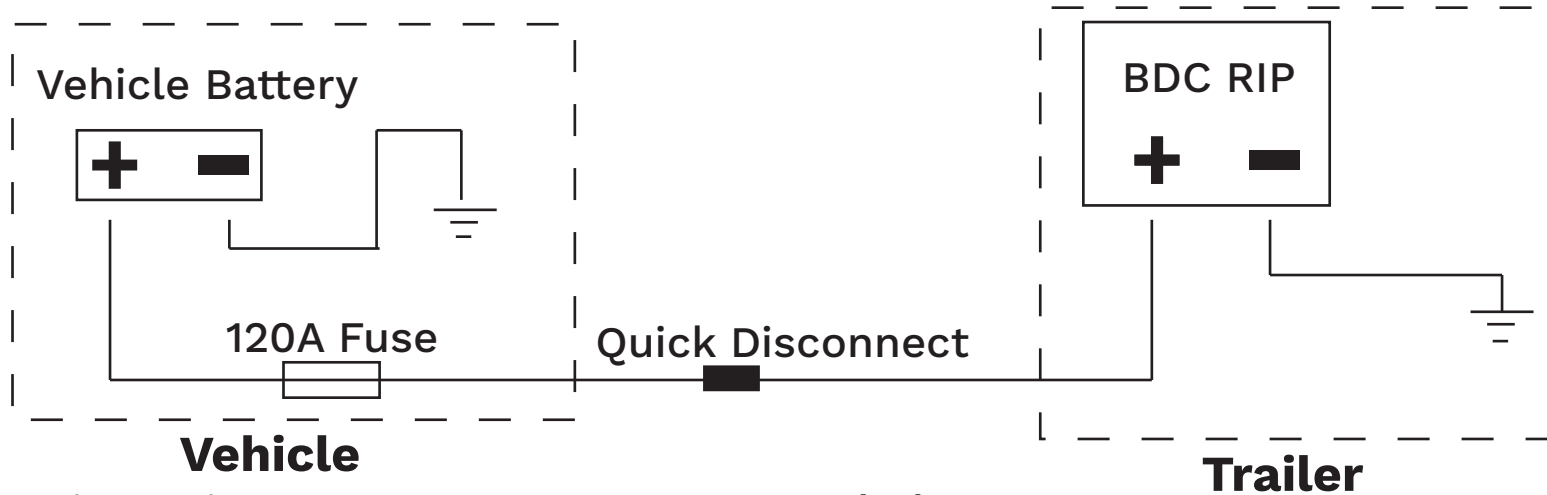

- 120A Fuse in engine compartment recommended
- Minimum Wire Size: 2 Gauge

## Mechanical

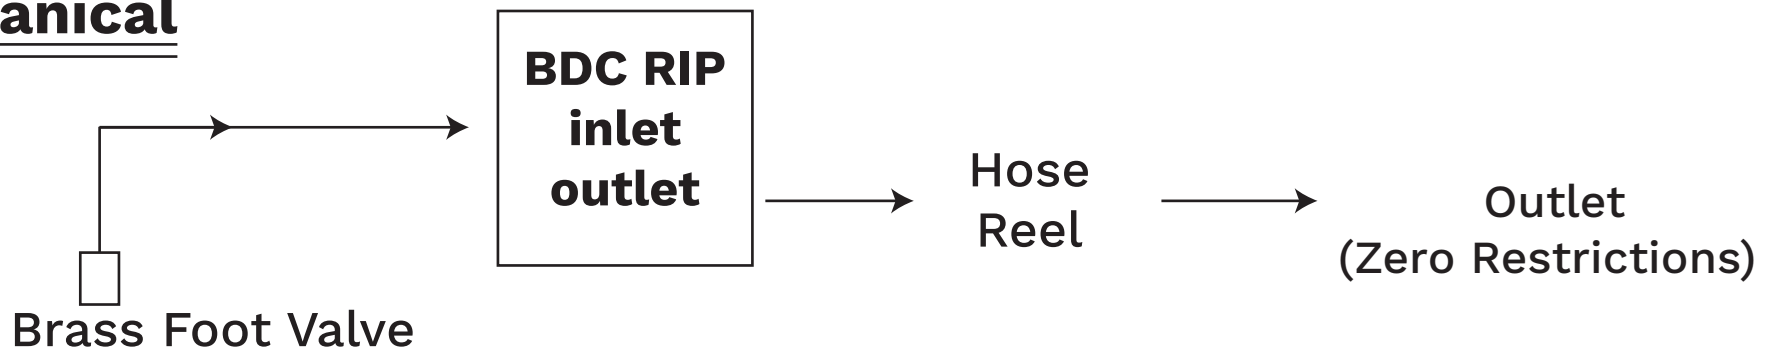

- To prevent debris from damaging pump head, use a brass foot valve on the inlet hose.
- No bends or 90's should be used on inlet or outlet.
- Do not use a shut-off on the end of the outlet.